

PROCEDURE REF# A-INL-037

X-Tractor security system

The security system is made to avoid a possible contact between the pusher and the X-Tractor cylinder in case of bad handling from the operator. Here is how it works:

When the X-Tractor cylinder goes out (fig. X-Tractor going out), the wheel that guides the cylinder release the latch (A) of the security system and the latch (B) stops the pusher when activated with the trigger or manually. Then, if you are not able to activate the pusher, it is maybe because the cylinder is not coming back perfectly at its initial position (fig. X-Tractor at initial position).

