

Fusion720 Inline wrapper Diagnostic procedure



- Xtractor sensor (X)

The sensor (X) detect when the Xtractor is fully store into the chassis.

The flat head surface of the sensor shall be about ¼ inch away from the mechanism

