

Fusion720 Inline wrapper Diagnostic procedure



- Automatic system sensor (G), (5P), (E)
 - Hoop start (G)
 - 5ft long round bale extra layer (5P)
 - Hoop stop and pusher return (E)

The flat head surface of the sensor shall be about $\frac{1}{2}$ inch away from the mechanism.

If set to close from the pusher, while pushing the pusher is moving slightly downward and might damage the sensors.

