


Computer power test

Find the LED indication light

- Under the wrapper, on the inside frame close to the engine there is a 2 controller kit's back to back. The smaller one (black) is the receiver for the remote steering and the larger one (grey) is for the Auto-Pilot.
- See the arrow in the picture to locate the green LED indication light that confirms the power is ok. There is red LED to the left of the green. It is for the error codes (see [A-INL-012 Auto-Pilot controller error code](#)).

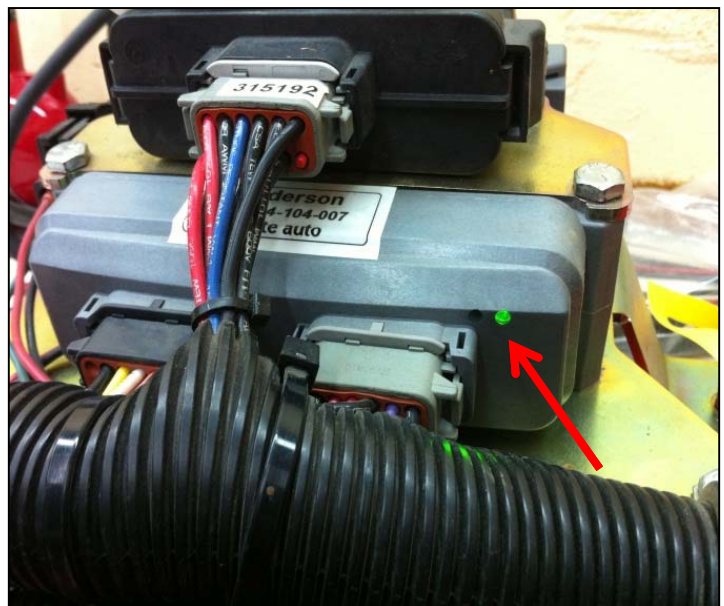

Tools needed: None

Required time: 2 minutes