PROCEDURE REF# A-INL-007





1- Remove the cover to access the batteries.

- Remove the batteries and you will be able to verify the contacts as shown in the second picture.
- If you have dropped the remote, the contact tabs may be bent and result a bad contact. Usually when shaking the remote, you should hear the batteries move a little bit inside.



2- Straighten the tabs.

 With a flat screwdriver or with longnose pliers, pull out slightly on the tabs and do a test with the remote control to be sure it works.

Tools needed: Flat screwdriver / long

nose plier

Time required: 5 minutes

