


Verification of the remote control

1- Turn on the blue switch on the control panel active the remote steering.

2- Test the buttons on the remote control:

Start the engine by pushing on the green button (#7). If it does not start, it could be because the engine was not turn off properly with the remote control at last usage. Then, press on the red button (#8) and retry with the green button (#7). Test every button one by one. The LED indication light of the receiver which is under the machine, close to the Honda engine. The light must flash yellow when holding the signal and must flash green when pressing a button on the remote control.

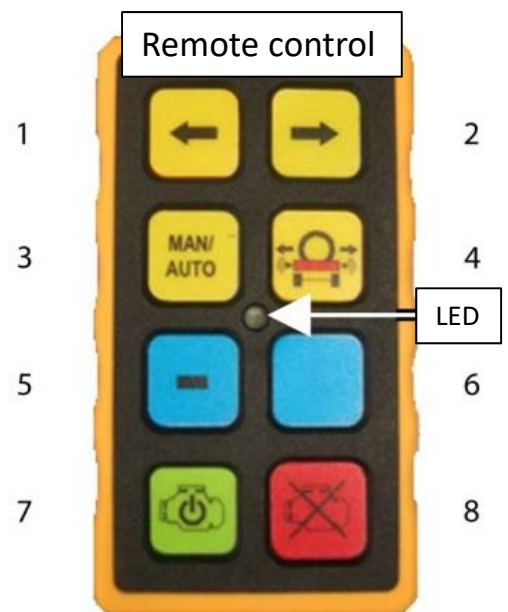



Verification of the remote control

LED indicators

Red LED	Green LED	Description
Off	Blinking	Normal transmission
Blinking	Off	Turning off the engine
Blinking	Blinking	Low battery