
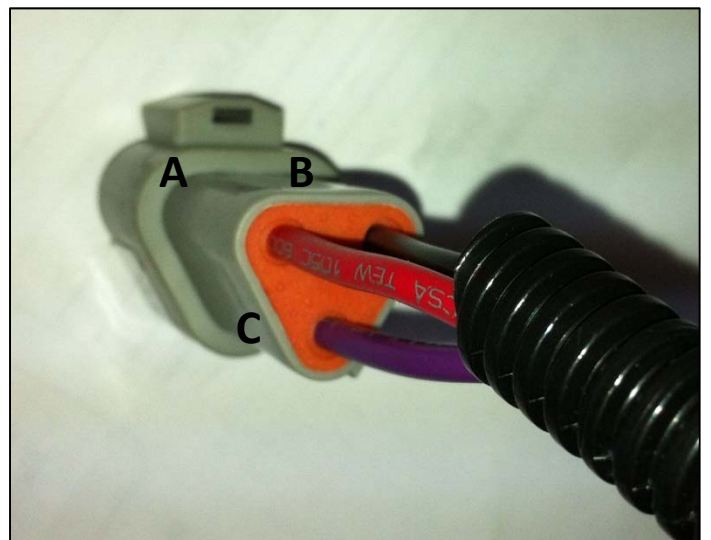


Wheel angle sensor wiring

1- Check if the wiring has not been modified (inversed wires).

- As the picture, face to the wheel angle sensor, the red wire is at right(C), the purple wire is at the center (B) and the black one is at the left (A).
- At the end of the harness, these 3 wires are in a triangle connector. Like in the picture beside, the side with the locking bracket (upwards), the black wire goes to the right, the red wire goes to the left and the purple one goes downwards.
- Note that this triangle connector is plugged with another triangle connector and the wires colors are the same.

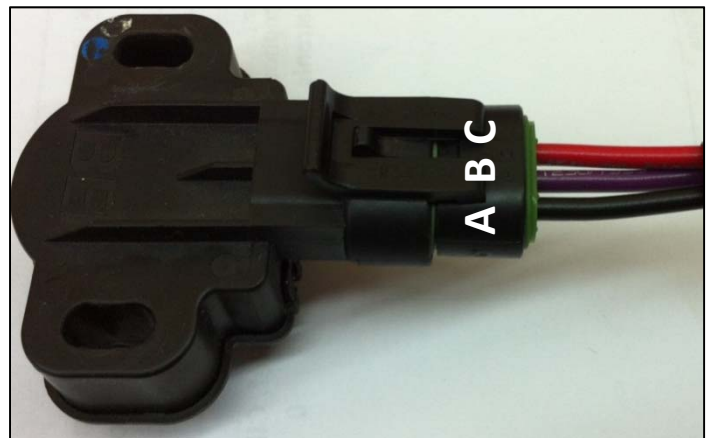

Tool needed: None

Time required: 5 minutes