



PROCEDURE REF# A-INL-022

Adjusting the 2 springs on the rack & pinion

If the hoop stops turning before completing its cycle or starts before the pusher bar wedge (wedge) hits the pointer plate, an adjustment may be necessary. With a 9/16 wrench, tighten the bolts a little bit.

