


PROCEDURE REF# A-INL-038

X-Tractor speed adjustment

If the cylinder goes in or out too slowly or quickly, you can adjust the speed directly from the front and the back of the valve's section. On the picture, we see the front adjustment (first section to the left with the shorter lever). That one fine-tunes the speed of the cylinder when it goes out. The back one fine-tunes the cylinder when it goes in. When the cylinder goes in, it is normal that RPM goes down. It is important to be on full throttle when using that option.

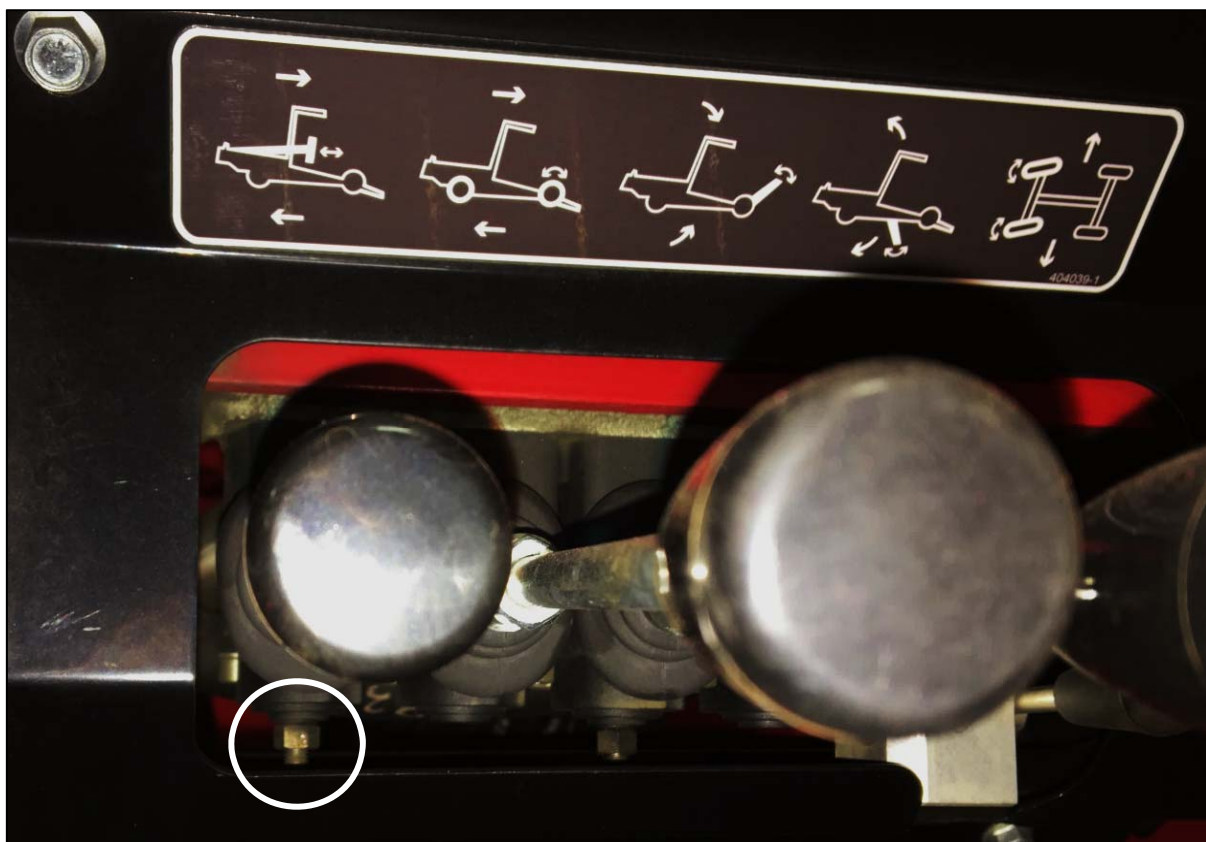

Tools needed:

- 8mm wrench
- 2.6 mm Allen wrench