

PROCEDURE REF# A-INL-031

Remote control association 2010 and before

1. The system require minimum 12V.
2. Turn the green (or blue) button « ON ».
3. Immediately turn the green (or blue) button to « PRG » let the remote control return by itself to « OFF » .
4. Press on any direction arrow, the green (or blue) button will flash.
5. Your remote control is now programmed.
6. Turn the green (or blue) button «ON».
7. Turn the Honda motor ignition key to on.

Computer and remote are now associated. Repeat this procedure if needed.

If the procedure dont work one of the component need to be changed or repaired.

