




PROCEDURE REF# A-INL-032


How to use X-Tractor

The X-Tractor system allows the user to finish the tube and empty the wrapper.

Before you put the last bale on the wrapper, it's really important to adjust the stopper of the pusher to the closest position to the hoop as possible.

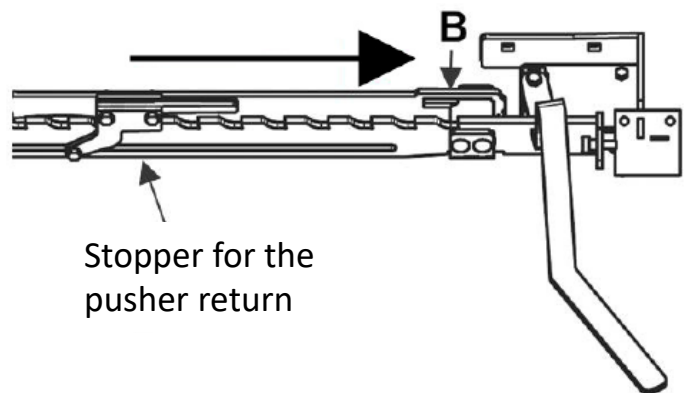

Put the last bale to be wrapped on the wrapper and when cycle is completed make sure that the bale is not on the pushing head of the X-Tractor. The system will be ready to use and you'll avoid any damage to the X-Tractor cylinder.

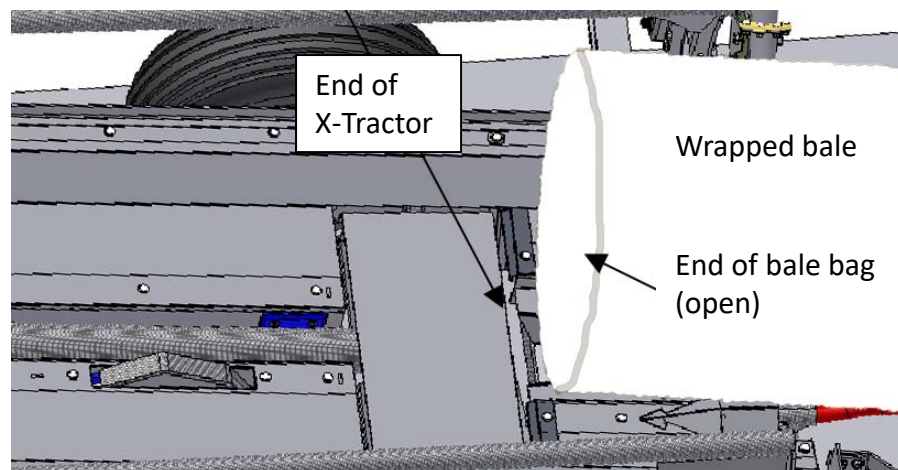

Note:

The X-Tractor system can only be used when the pusher has completely returned to its home position. The pusher will only move once the X-Tractor is completely retracted to its home position.



PROCEDURE REF# A-INL-032

How to use X-Tractor

Preparation for finishing the bale row:

Remove the locking pin from the idle control of the engine so that it runs at its highest RPM. Turn the hydraulic brake knob at the minimum setting. Be sure that the steering wheels are straight, this will avoid the machine to turn during the extraction of the bales.

Finishing the bale row:

Activate the X-Tractor with the control lever on the main valve. As soon as the X-Tractor head comes in contact with the last bale, you'll have to manually activate the hoop to finalise the bale row. Once you are done with wrapping, open the safety gate to cut plastic film on each stretcher (The engine will automatically turn off because of the safety switch). Close the gate and start the engine to finally extract the bale row.

Completely push off the last bale:

Activate the X-Tractor and push the row until the last bale is free of the wrapper (around 25 seconds). Retract the X-Tractor until it returns to its home position. Move the wrapper away from the bale row so that you can close the end bag without having to climb on the front rollers of the wrapper.

