


PROCEDURE REF# A-INL-033

## Safety gate killswitch

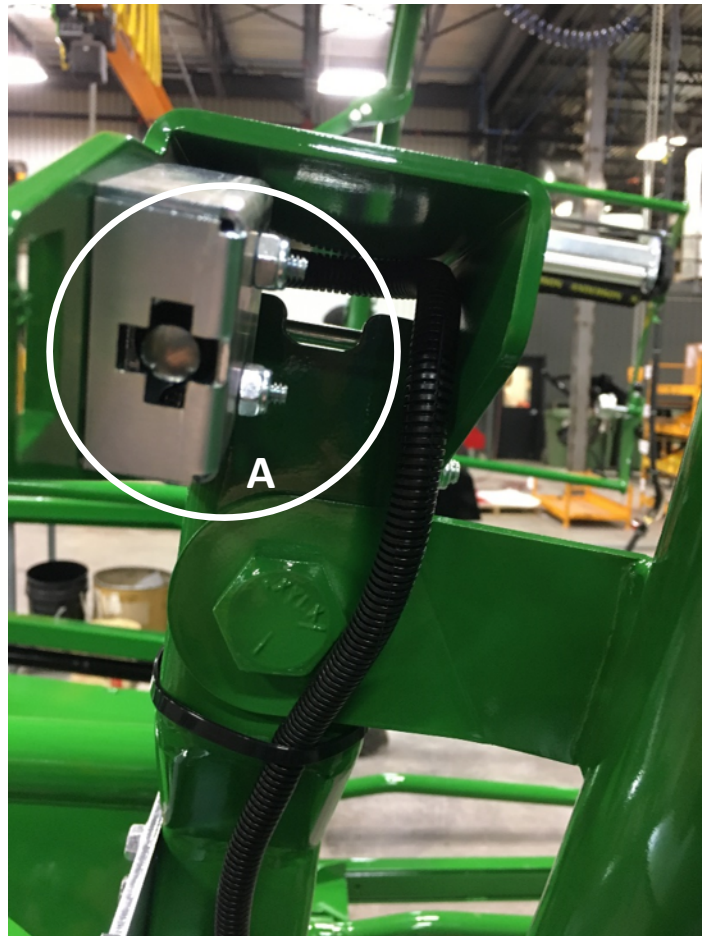

**A-** View of the killstich when the gate is open

The engine won't start as long as the safety gate is open. If the gate is closed but the engine still won't start, you can test the killswitch by pulling directly on the switch and try to start the engine. Be carefull during this operation.