



PROCEDURE REF# A-INL-045

Fuses localisation

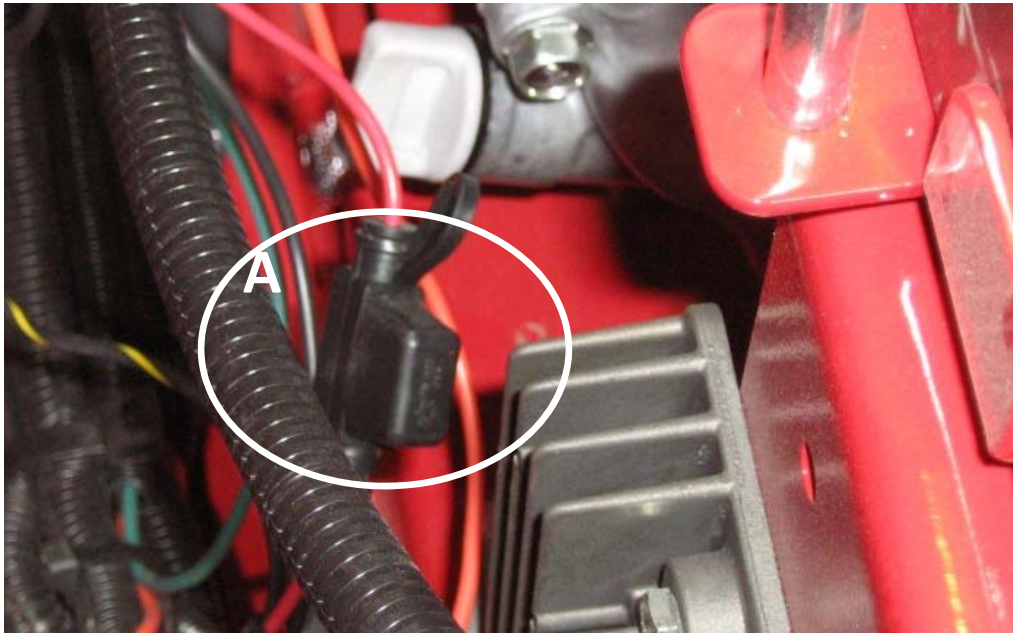

A – Fuse for the computer system, 20 amp

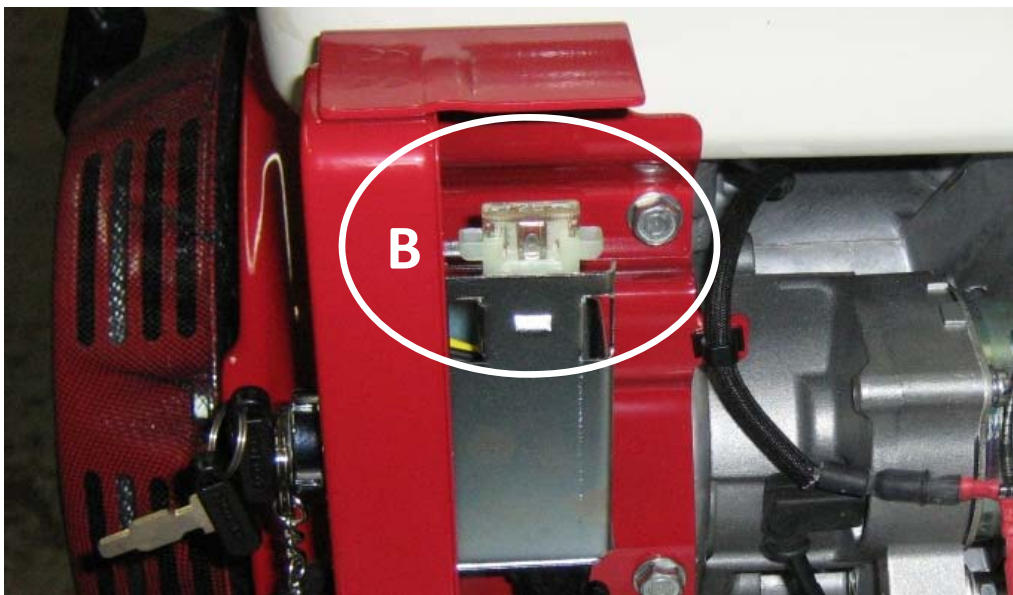

B – Fuse for the starter, 25amp