

PROCEDURE REF# A-INL-048

## Localisation and verification of the receiver

The receiver is located under the frame, near the Honda engine (Photo 1). When the emergency button is pulled out and the blue button is activated, a steady yellow light appears (Photo 2). The light turns green when it receives a signal from the remote control (Photo 3).

