

PROCEDURE REF# A-INL-041

Blue button



A– Blue button, position « On »

When the blue light is activated, the remote control is linked with the machine. If by using either the key or the green button the engine try to start but refuse to do so, make sure this blue button is not activated.