


PROCEDURE REF# A-INL-042

## Blue button connection

If the blue light of the control box doesn't seem to work, open the box and make sure that red wire (A) and black wire (B) are connected properly to the interuptor. If the bulb doesn't light up and the functions seem to be working, replace the bulb.

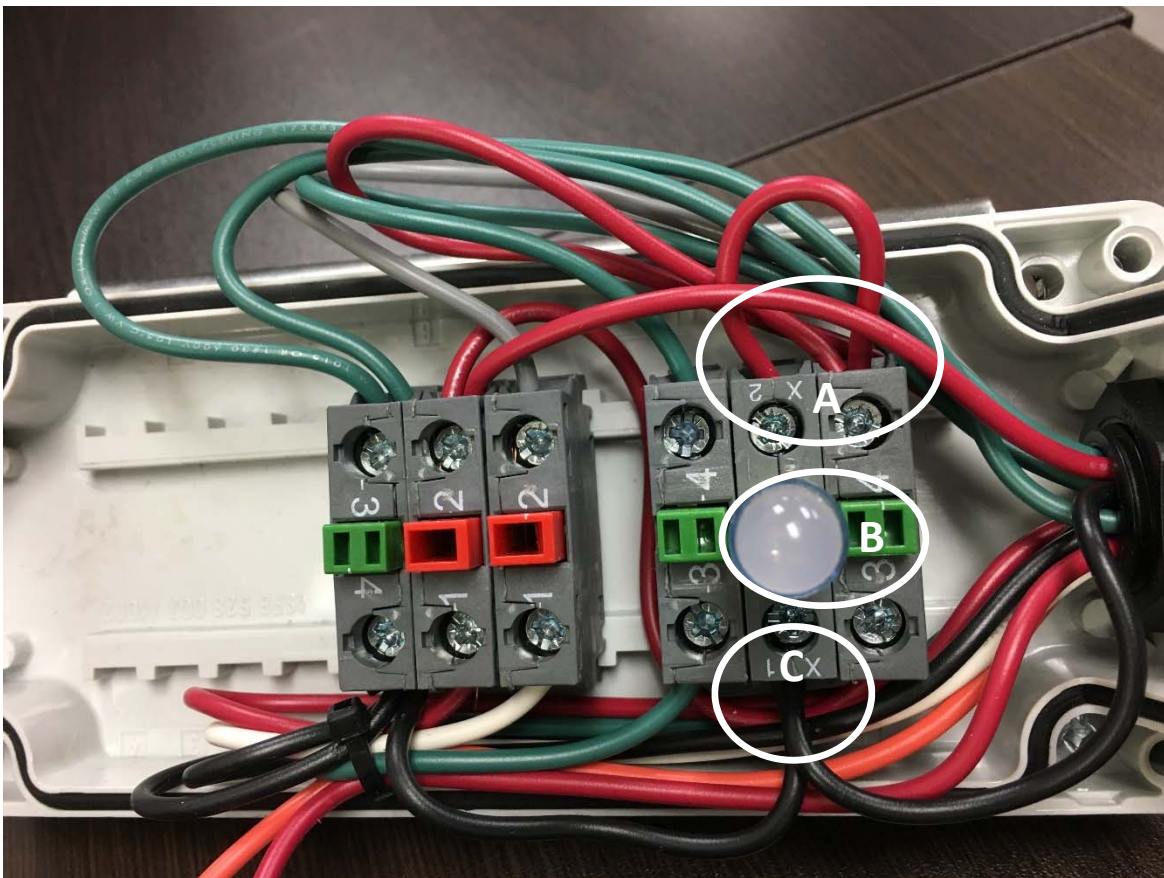

**A-** Red wire (Power)

**B-** LED bulb

**C-** Black wire (Ground)