


The remote is out of range

The key/emergency stop button, at the top of the remote control, is necessary to its operation. It allows the link between the remote and the computer. If the  code displays on the screen, this means that the remote does not reach the computer. The key must be in place and be cleaned up if there is presence of dirt (dust, sand etc.) as illustrated in A.



If the error code « **H ERR** » displays on the screen (B) this means that the remote must be replaced because it is broken and unfixable (#315205).



The remote is out of range

The key contains data that requires an association with the remote control. It is impossible to associate more than 1 key per remote. Follow the next steps if the key replacement is necessary.



The remote is out of range

- 1) Remove the broken key (#900557) from the remote control;
- 2) Install the new key in the remote connector;
- 3) Press START, the LED indicator light will flash and the **Initialize key** will appear. Note: Depending of the remote version, the code may not display, then still keep following these steps;
- 4) Press and hold the START and S11 buttons. After 3 seconds, the light will flash green/red. Note: Do not release the START and S11 buttons.
- 5) Press on the STOP button and keep holding the START AND S-11 button until the remote turns off;
- 6) Press START to turn on the remote and the association is now achieved.

