

Wrapping without remote control (2014 and +)

If the remote is defective or lost, it is possible to use the wrapper in semi-automatic mode. The computer replicate the last use configuration using the blue button.

- 1- Press a first time on the blue button so the wrapper will get ready for the alignment.
 - 2- Press a second time on the blue button to start the alignment. When alignment is done ($\pm 1:30$ minute), the light stops flashing. When the light stays on, the wrapper is ready for a wrapping cycle.
 - 3- Press once again on the blue button in order to perform the semi-automatic wrapping cycle then press again for each needed bale.
- Note: It is recommended to make an alignment after 100 bales (when oil got warm) by pressing on the emergency stop button and start on the #1 above.

