

PROCEDURE REF A-IND-043

## REPLACING HYD MOTOR IND 2014+

The first step is to manually dump the table and unscrew the small gear connected on top of the hydraulic motor.

Look under the table to spot the turn table hydraulic motor, you will need to remove the guard (#A). Remove the speed sensor located at the bottom (#B). You should use a flat screw driver to remove the lock (showed in picture #2) once the lock is remove you can pull it down.

Then disconnect the hydraulic hoses and unscrew the bolts that hold the hydraulic motor.

