

IG-C3 BATTERY CHANGING

The IG-C3 has an internal battery pack that can be replaced. The part number is 900579.

However you need to be careful when opening the counter because the front keyboard is attached to the back part.

First step is to open the monitor by unscrewing the 4 screws at the back, you don't want to take both part apart too much.

The picture below show what it look like when opened, circle in red is the connection of the keyboard to the board (you need to be careful not to break it when opening the box).

The yellow circle is the jumper you need to remove before getting started to remove power of it so you have no danger of short circuit and damage the main board.

The green are the screw you need to remove to access the battery.

The blue are the connection of battery and charging plug (you need to make sure you put the wire at the same place when reinstalling).

If you don't want to do it yourself it is possible to have your local Anderson dealer call us to get a return number and send it to us for reparation.

