

PROCEDURE REF# A-IND-001



Testing voltage from battery

First you need a voltage tester.

When the engine is not running your battery should be over **12V.**

With the engine running the battery should be around **14,5V.**



Photo of a new battery with engine running.