



Fuse location

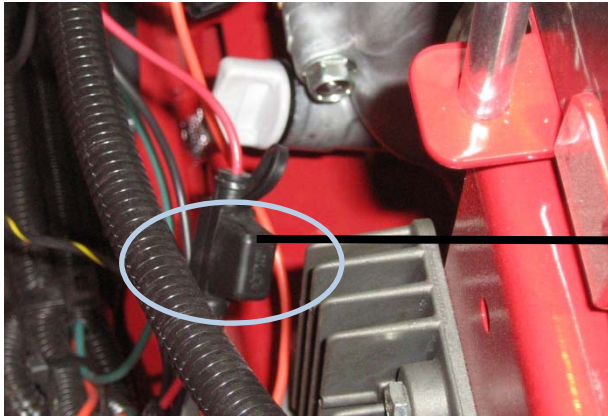

Power to computer fuse (protects the computer from a surge from the starter) 20amp.

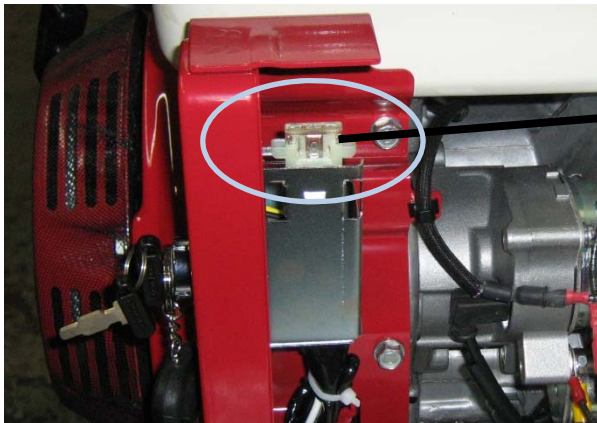

Starter fuse 25amp

2013 and before

Power in to computer fuse (protects the computer from inversed connection from the battery of the wrapper) 20amp.

20 amp (to protect the output going to sensors or solenoid)

2 amp (to protect the circuit panel)

