

Filling the accumulator drop off

1. Remove the handle (1).
2. Turn the lock washer (2) to enable the handle to turn and open the ball valve (4).
3. Replace the handle (1).
4. Connect a hydraulic pump (or to your tractor's hydraulics) at the male quick connect (3).
5. Open the ball valve (4).
6. Add hydraulic oil to a pressure of around 1000 lbs (for dumping system only, the accumulator for the cut and hold is not the same).
7. Test the reaction of the dumper by pushing down on it. If it comes back up without any problem the pressure is ok. If you cannot push down the dumper at all you will have to remove some of the oil.
8. Close the ball valve (4).
9. Remove the handle (1).
10. Turn the lock washer (2) that locks the handle.
11. Replace the handle (1).



3

4