


Hydraulic cut & hold adjustment



Adjusting the plastic film cutter

First check the condition of the blade and replace it if necessary. Additionally, by pushing the plastic in the direction of the blade, the fingers normally push the rubber bumper to the adjustment bolt in the back. Conversely, a spring provides tension from the stopper toward the fingers in order to hold onto the end of the plastic for the next bale. This bolt (1) and this spring (2) can be adjusted as necessary.

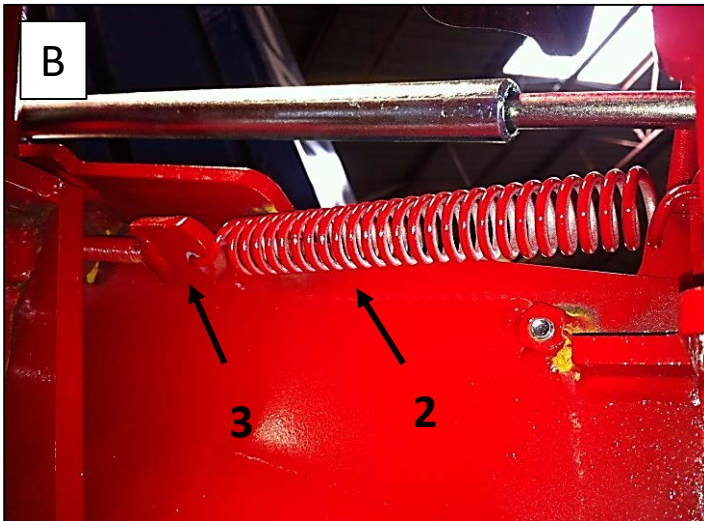


For a perfect adjustment, the fingers must contact the rubber bumper a little after that the plastic cut by the blade.

As illustrated in picture C, the fingers not must hit the rubber bumper too early or too late.

Too earlier: The plastic film will not cut.

Too late: The plastic will not be hold for the next bale.

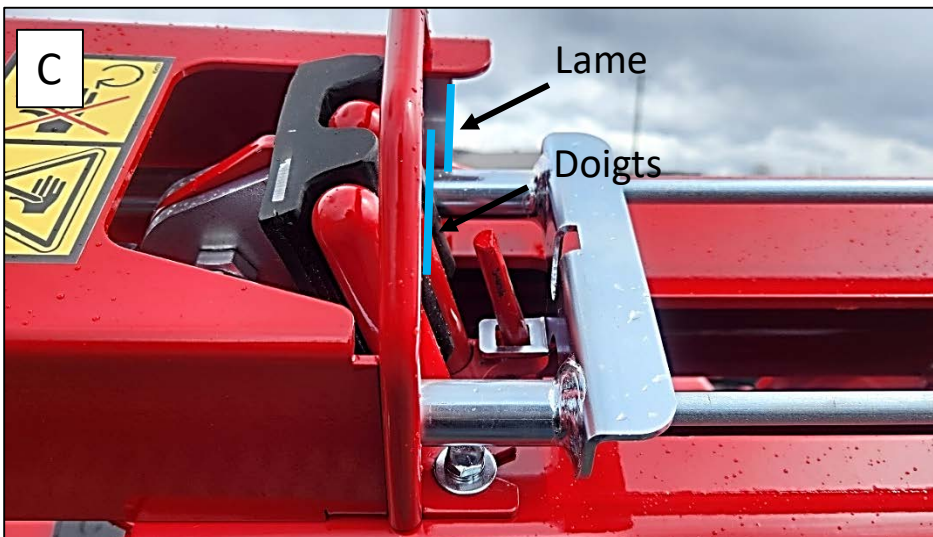

- 1- Adjustment bolt for the rubber bumper
- 2- Spring
- 3- Adjustment rod