


PROCEDURE REF# A-IND-018



Unloading table adjustment

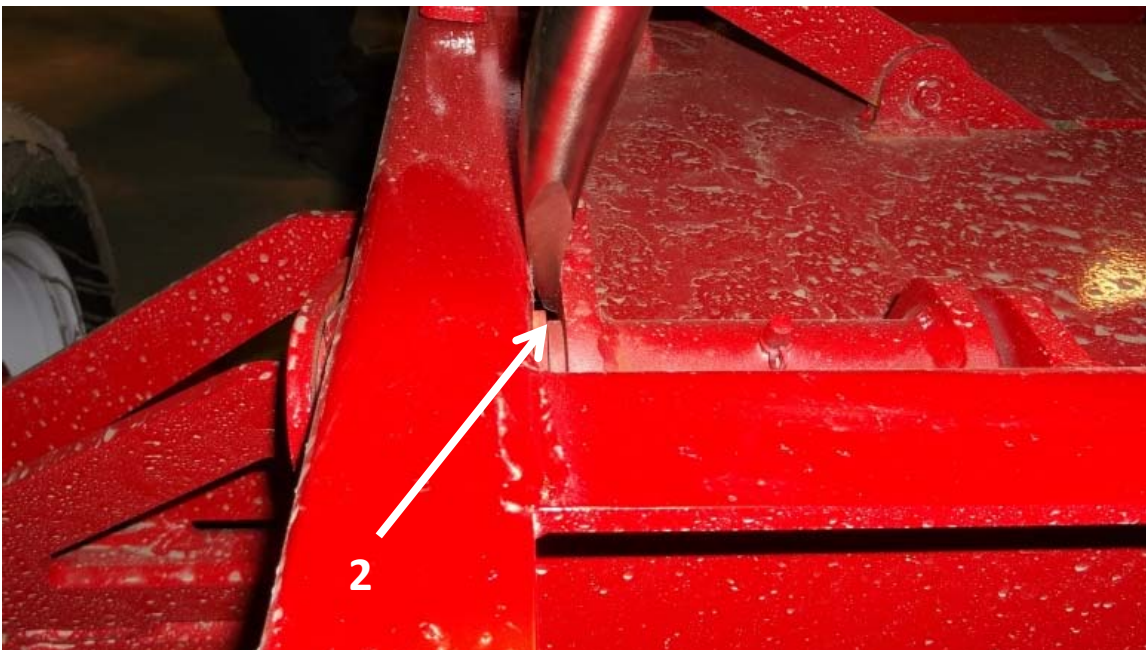

We use shim (1) on both side of the table to align the unloading table, with a pry bar (2). You are not supposed to be able to move the table more than 1/16".

If the table move sideway more than 1/16", add shims.

PROCEDURE REF# A-IND-018

Unloading table adjustment

