
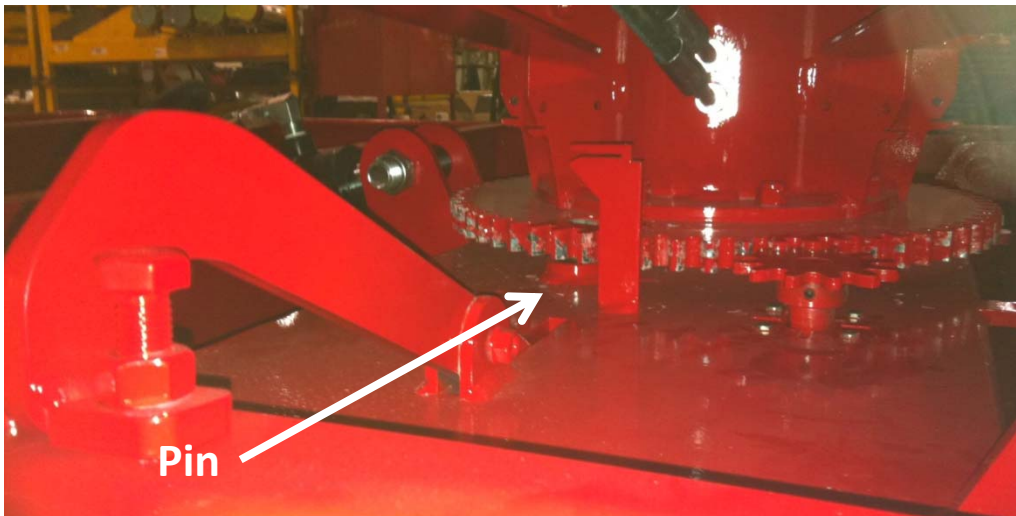


Table locking pin

The pin works as a lock when dumping the table. If this is not aligned correctly when in the dumping position, you will not be able to dump.

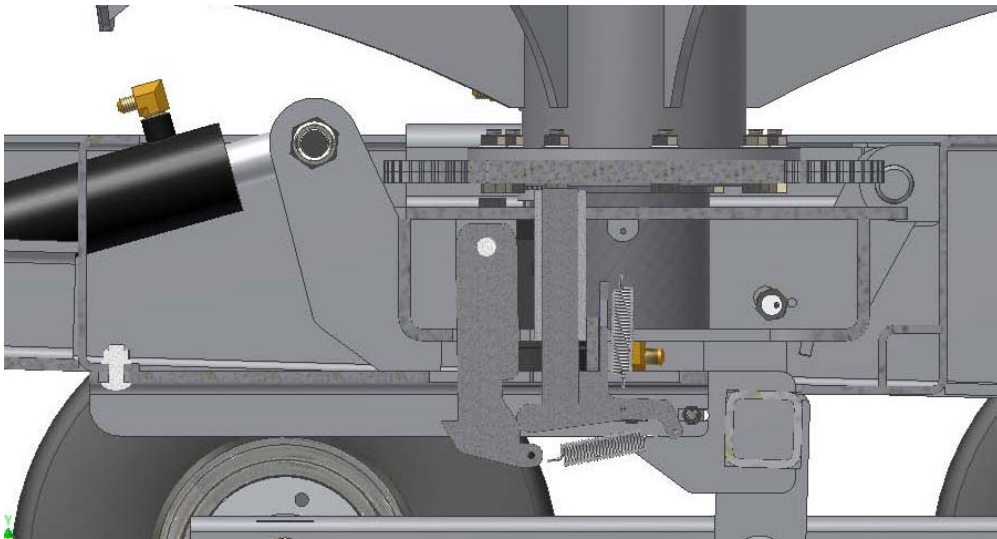

- Must be adjusted flush with bushing
- Lubrication is critical
 - Table doesn't dump
 - Pin gets stuck in the gear

Table locking pin

Remove locking pin when bent

- Pass a chain through the cross member and the locking pin.
- With the lever (on the main valve), raise up the table until the pin comes out.

