
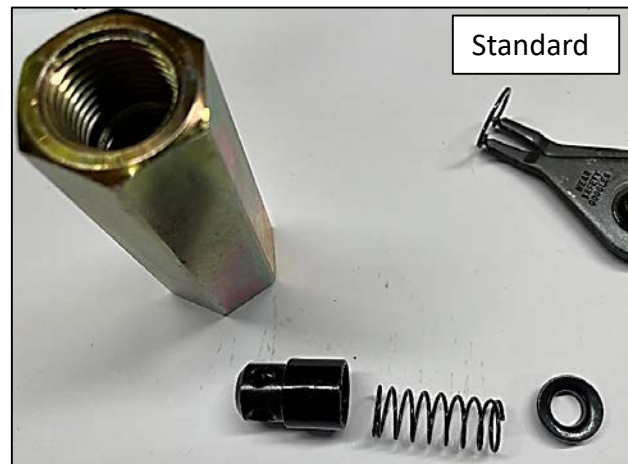


PROCEDURE REF# A-MER-007

Cleaning of a check valve

When the flapper is not working properly or not working at all, a dirt is probably stuck inside. By pushing on it with a screwdriver, the moving purpose must move easily. Follow the next steps to extract it.

1. With a snap ring pliers, remove the snap ring and take care to not lose the spring and the cover that will go out.
2. Remove the 3 movable parts (the seat, the spring and the cover).
3. With an air blow gun, give off the debris from inside the valve and clean up the parts if needed in a cleaning parts bin.
4. Place back the components carefully and make sure that the snap ring is well placed in its groove.

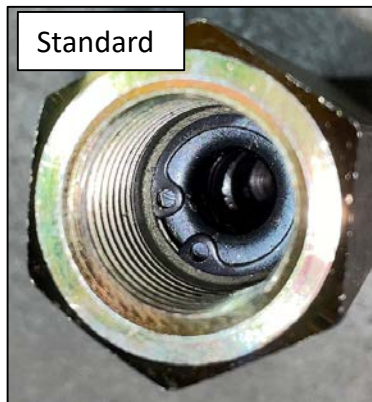

Requires time:
- 15 minutes

Needed tools:
- Snap rings pliers