

PROCEDURE REF# A-MER-003

Adjustment of the sequence valves

1. Make sure that the hydraulic flow from the tractor does not exceed 13 GPM (50 Lpm).
2. Locate the sequence valve (below illustration).
3. On the model 915, unscrew completely the set screw then turn 4 1/8 clockwise turns.
4. On the model 1060, unscrew completely the set screw then turn 4 3/4 clockwise turns.

