


Error #1

Sensor error RPM_PTO

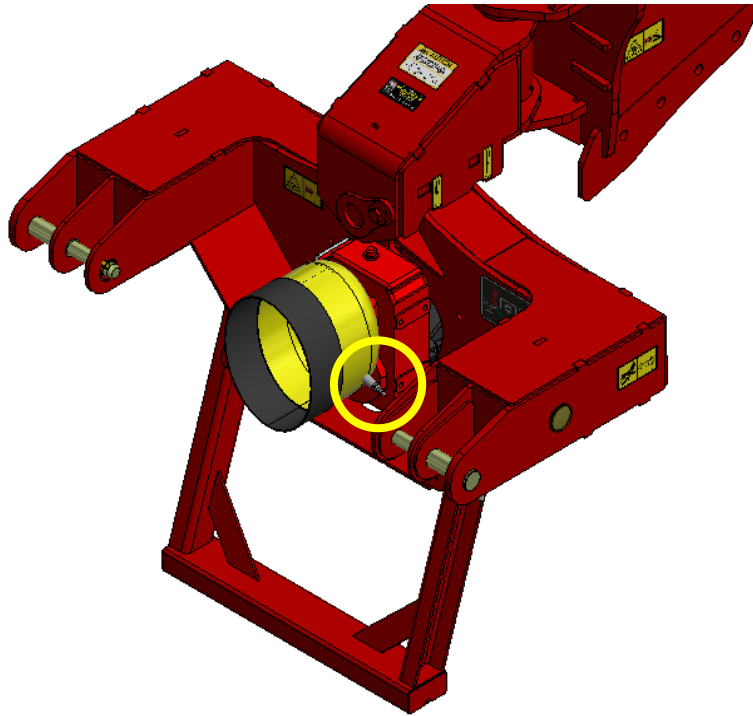

The error code #1 means that the controller does not receive a signal from the sensor during the PTO is turning.

1. Stop the tractor's PTO and wait until it is completely stopped.
2. Inspect/adjust the sensor located on the PTO guard. Refer to the protocol A-MER-008 in order to validate the good functioning.
3. If needed, follow the sensor wires from one end to the other to make sure there is no cut or jammed spot.