

Error #5

Sensor error HYD_PRES




MC024 – C1P05 - Function



Identification of the controller in problem


Identification of the PIN # on the controller where the wire start from

Identification of the sensor or coil's valve section where the wire go to

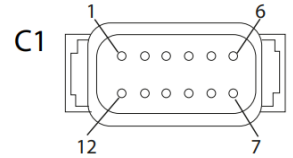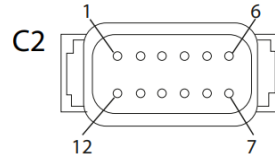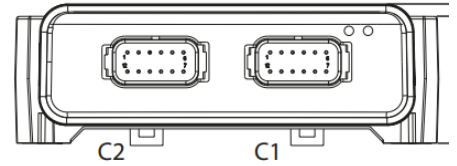

Error #5 means that the controller does not receive signal from the hydraulic pressure sensor while the PTO is turning.

Inspect the wire from pin #05 of the MC024 controller's C1 connector until the hydraulic pressure sensor located as below illustration. If the wire is not damaged, the hydraulic pressure sensor must be replaced. In the Settings menu, click on tab INPUTS/OUTPUTS and the C1-P05 (System pressure) will indicate 0 mV when in error.

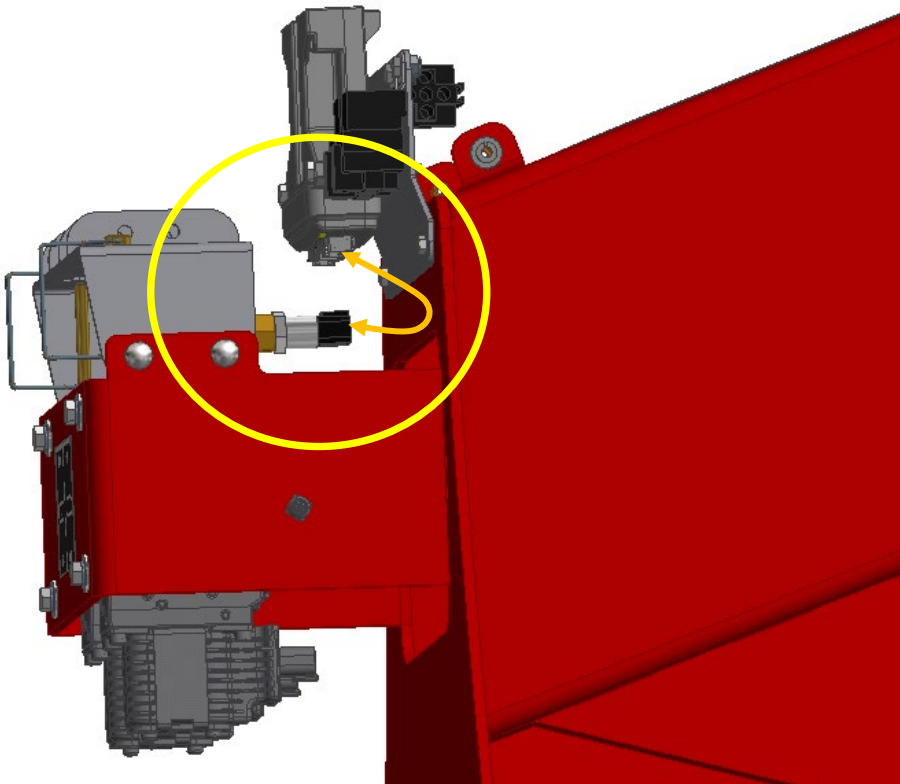


ELECTRICAL DIAGRAM

For more details, consult the electrical diagram of the machine:

- 1- Go to www.grpanderson.com
- 2- Click on Resource Center
- 3- Select the folder – Electric Wiring Diagram –
- 4- Select the folder associated with your machine – Mergepro 915-1060 –

Or follow the link below :

<https://grpanderson.com/en/resource-center/?section=2-Public%20section/-%20Electric%20wiring%20diagram%20->

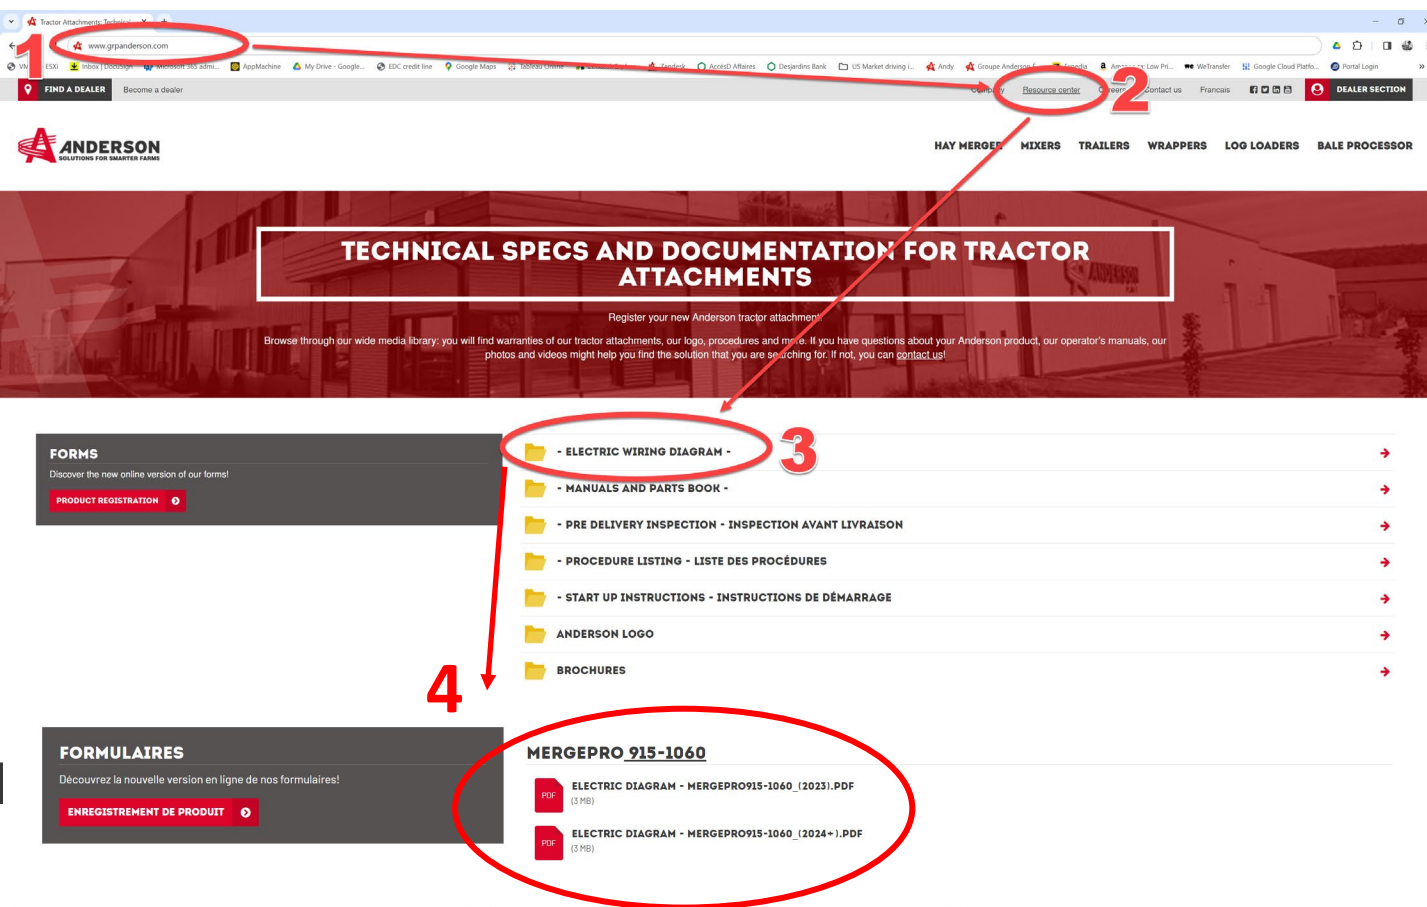

The screenshot shows the Anderson website interface. The browser address bar shows www.grpanderson.com (Step 1). The navigation menu includes "Resource center" (Step 2). The main content area is titled "TECHNICAL SPECS AND DOCUMENTATION FOR TRACTOR ATTACHMENTS". A list of categories is shown, with "- ELECTRIC WIRING DIAGRAM -" (Step 3) selected. Under this category, the "MERGEPRO 915-1060" section (Step 4) is highlighted, containing two PDF files: "ELECTRIC DIAGRAM - MERGEPRO915-1060_(2023).PDF" and "ELECTRIC DIAGRAM - MERGEPRO915-1060_(2024+).PDF".

TROUVER UN
CONCESSIONNAIRE

SECTION
DOCUMENTATION

ACCÉDER À L'ESPACE
CONCESSIONNAIRE