

## Scrapper modification (078-CON-065)

The roller scrapper must be modified in place (and on the conveyor) during installation.

1. Fix the scrapper in a vice.
2. With a locking pliers (vise-grip™ style), grip the center tongue then push as the below illustration to approximative 30 degrees or like the replacing scrapper.



### Scrapper modification (078-CON-065)

3. Install the scrapper the way to be the closest from the pulley.
4. Make the pulley turning and if the center tongue rubs, pull it up until it turns free (around 1/16 inch).

