

Error #28

Error sensor **MERG_SPD**

The error code #28 means that the controller does not receive a signal from the sensor during the machine moves forward.

1. Completely stop the tractor.
2. Inspect/adjust the sensor located inside of the right-side wheel. Refer to the protocol A-MER-008 in order to validate the good functioning.
3. If needed, follow the sensor wires from one end to the other to make sure there is no cut or jammed spot.

