

ADJUSTING THE HITCH'S POSITION

Adjust the tongue of the mixer while on a leveled surface when the mixer is empty and uncoupled. The difference between the height of the tractor hitch (A) and the mixer tongue (B) should not be more than 3 inches for a small mixer (A280, A380, A520) and not more than 2 inches for the bigger ones (A700, A950, A1230).

On small mixers (A280, A380, A520) the tongue can be adjusted from 10 inches to a 42 inches position.

On bigger mixers (A700, A950, A1230) the tongue can be adjusted at a 14, 18, 22, or 26 inches position.

To adjust the height of the mixer tongue:

- 1- set up two jack stands to support the hitch.
- 2- remove the mounting bolts from the hitch.
- 3- Using the jacks, adjust the height of the machine frame to align with the desired adjustment holes.
- 4- Insert the mounting bolts and remove the jack stands.

