

ADJUSTING THE CUT SIZE

The cut size depends on the position of the two hydraulic restrictor blades. For a finer cut, the restrictor blades must be completely inside the mixing chamber.

To adjust the cut size:

- 1- You need to move the restrictor blade (B) all the way out of the mixing chamber using the hydraulic controls.
- 2- Stop the tractor.
- 3- Remove the restrictor blade guards (A) by unscrewing the four bolts on each guard.
- 4- Insert the stroke limiter bolt in the hole that corresponds to the desired position.
- 5- Put the guards back on.

