

INSPECT OIL LEVEL

Inspection of the oil on the gearbox should be done every 50 hours. First change of oil should be done after 100 hours of use and then every 500 hours. Anderson recommends using ISO 220 oil.


The gearbox level is good if oil comes out when you unscrew the cap in the middle of the gearbox (#2 in pictures below).

To fill the gearbox:

- 1- Remove the drive shaft and the protective guard at the end of the gearbox.
- 2- Unscrew the caps (#1 and #2 in pictures below)
- 3- Pour oil into the opening (#1 in pictures below) until it comes out of the hole (#2 in picture below).


To drain the gearbox:

- 1- Unscrew the drain plug (#3 in picture below)
- 2- Collect the oil in a leak-proof container.
- 3- Put on a new gasket and put the drain plug back in.

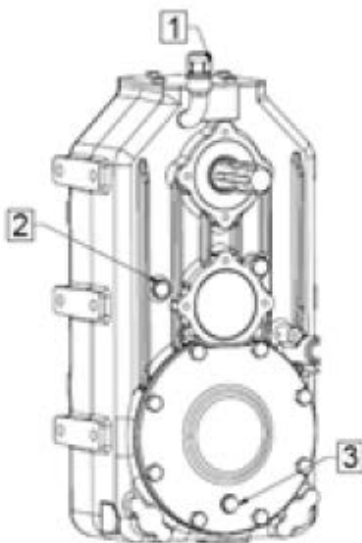


A280 et A380

A

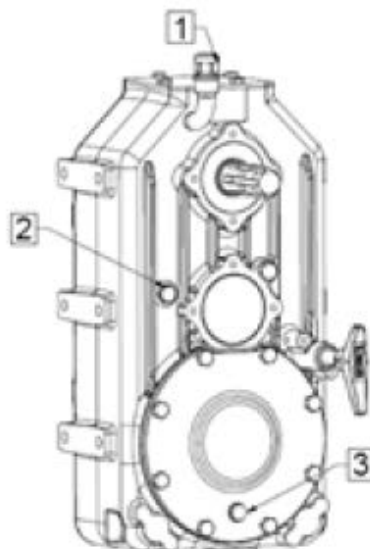

A380

B

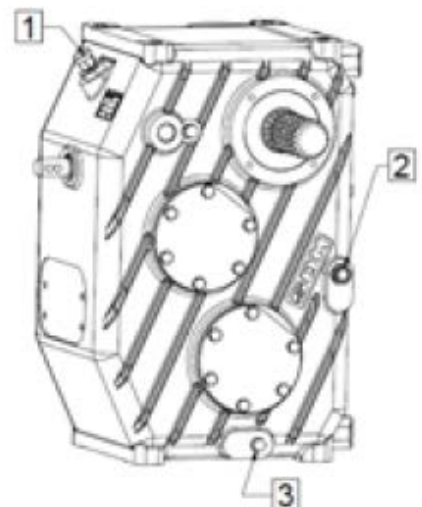

A520, A700, A950 et A1230

C