

## Closed center hydraulic

To use the blower with a tractor with a closed-center hydraulic system, you must replace the plug on the main valve for the machine's hydraulic functions.

**You will need to order the new plug from your Anderson distributor (part number: 470104).**

### To replace the plug on the main valve:

1. Remove the central guard on the front of the machine.
2. Remove the plug (A) and replace it with the new plug (#470104).
3. Tighten the screw (B) by 2 turns to correct the adjustment.
4. Put the guard back in place.

